

NOTES: READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION.

1. NEO-METRO PIVOT COVER INCLUDED DIFFERS FROM VENDOR SUPPLIED PIVOT COVER AND INCLUDES A MACHINED FINISH, IS HEAVIER AND IS LESS PROTECTIVE PLASTIC FILM.

2. NEITHER LEFT NOR RIGHT PIVOT ANCHOR ASSEMBLIES ARE INTERCHANGEABLE.

3. USE 1/4"-20 UNC PAN HEAD SCREWS PROVIDED WITH TOILET SEAT FROM TOPSIDE ONTO TAPPINGS ON FIXTURE.

4. TOILET SEATS PURCHASED FROM OTHERS MUST HAVE TOP MOUNTING CAPABILITIES. INSTALLER RESPONSIBLE FOR PROVIDING APPROPRIATE 1/4"-20 UNC HARDWARE.


### INSTALLATION INSTRUCTIONS FOR TOILET SEAT FROM NEO-METRO

A- ASSEMBLE PIVOT COVER (1) PROVIDED TO BOTH LEFT AND RIGHT PIVOT ANCHORS (2) AS SHOWN IN DETAIL 'A' PRIOR TO INSERTING PIVOT INTO BUSHING IN TOILET SEAT HINGE HOLES. NEITHER RIGHT NOR LEFT PIVOT ASSEMBLIES ARE INTERCHANGEABLE.

NOTE: NEO-METRO PIVOT COVER (1) INCLUDED PREVENTS THE SEAT FROM HITTING THE WALL OR TANK AND DIFFERS FROM THE VENDOR SUPPLIED PIVOT COVER. NEO-METRO STAINLESS STEEL PIVOT COVER INCLUDES A MACHINED FINISH, IS HEAVIER AND IS LESS PROTECTIVE PLASTIC FILM.

B- PLACE TOILET SEAT INTO POSITION. WHILE HOLDING FOOT RING (3) IN PLACE, ALIGN PIVOT ANCHOR SLOTS WITH FIXTURE SEAT ANCHOR TAPPINGS (4). SET ANTI-ROTATION DISK (5) INTO POSITION AND SECURE WITH 1/4"-20 UNC HARDWARE (6) PROVIDED.

C- FIRMLY PRESS SEAT PIVOT COVERS (1) DOWN ONTO PIVOT ASSEMBLY OVER FOOT RING (3) TO COMPLETE INSTALLATION.

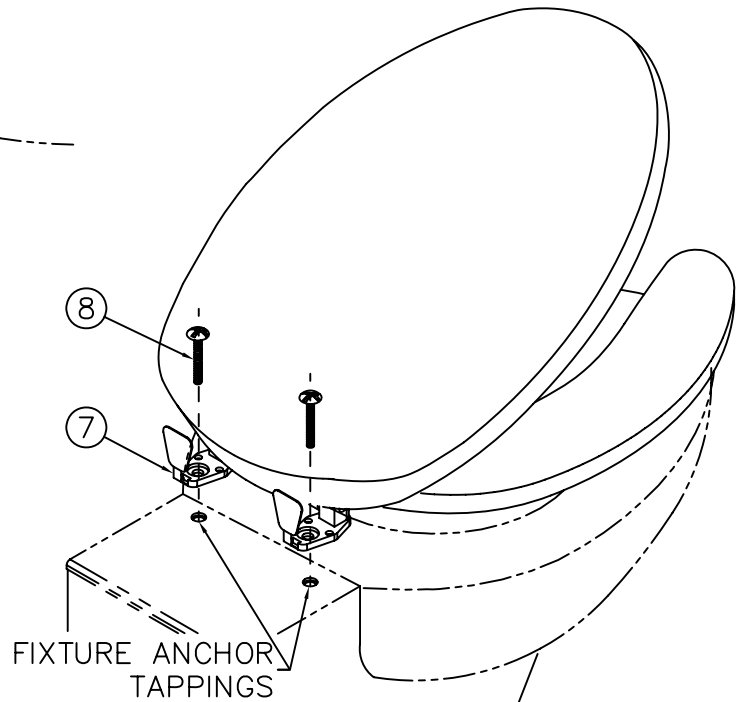

### INSTALLATION INSTRUCTIONS FOR TOILET SEAT FROM OTHERS

ALIGN THE TOILET SEAT HINGES (7) WITH FIXTURE SEAT ANCHOR TAPPINGS AND SECURE WITH APPROPRIATE INSTALLER PROVIDED 1/4"-20 UNC HARDWARE (8).

**NEO-METRO®**  
P.O. BOX 3527 INDUSTRY, CA. 91744  
(800) 591-9050 \* (626) 855-4854  
FAX (626) 937-4725 WWW.NEO-METRO.COM

TITLE **NEO-METRO TOILET SEAT INSTALLATION**

MANUFACTURE DATE  
**SEPTEMBER 1999**  
**TO PRESENT**

DATE ISSUED  
**02/07/00**  
DATE REVISED  
**03/12/08**

DRAWING NUMBER  
**9935-040-001**